

J-Master Tool® -L1700

For attachment of J-Clip® (L1701) and Clip-Pur® (L1801) Hanger Wire Clips.



Clips Used With the J-Master Tool®

J-Clip® (L1701)

- Strong, reliable attachment of pre-tied hanger wire.
- Use for open web bar joists or purlins.
- Each clip fits 1/16"-1/4" flanges.




Clip-Pur® (L1801)


- Fast, easy attachment of pre-tied hanger wire from Z-Purlins.
- Disengages from J-Master tool after installation.
- Two magnetic strips attached to J-Master tool make installation easy.



Easy Installation

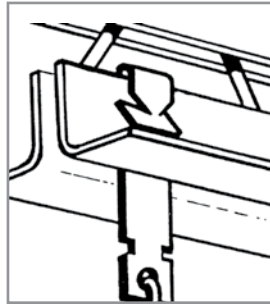

1. Attach a 1/2" pipe extension (dielectric pole available) to the threaded end of a J-Master tool, and place pre-wired J-Clip into tool.
2. Insert the J-Clip up into the void between the two base angles. Position the clips over the vertical flange and pull down.
3. Disengage the tool by lifting up and out.

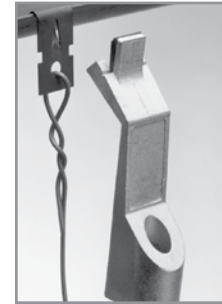

1. Attach J-Master tool to end of threaded 1/2" pipe or dielectric pole. Lay pre-tied Clip-Pur against magnetized strips.
2. Raise the Clip-Pur up to the purlin. Position the clip on the 45° flange and give a downward tug, the clip is now in position.
3. Disengage the tool by lifting up and out.



J-Clip attached to the J-Master Tool



Clip-Pur attached to the J-Master Tool